

UNI-DOLLY®

READ ALL ASSEMBLY AND OPERATING INSTRUCTIONS BEFORE USING THE UNI-DOLLY.

1. DO NOT USE UNI-Dolly if damaged in any way.
2. Make sure all nuts and bolts are tight at all times.
3. 4800 lb. (2100 kg.) maximum weight capacity per dolly.
4. Only use on smooth flat surface.
5. Never work on, around, or under vehicle while Uni-Dolly is being used.
6. Be aware of obstructions on floor surface that might interfere with caster movement.
7. Never allow more than 8" (20 cm.) of threaded rod to show above jacking nut.
8. There are no chain or cable attachment points, therefore, never pull a vehicle with chains or cables attached to the Uni-Dolly

MAKE SURE CLEVIS PIN STOPS ARE IN TIE BAR AND PROPERLY POSITIONED!

FOR CASTER ASSEMBLY, PLEASE SEE ADDITIONAL ASSEMBLY DRAWINGS.

