


HT0624-XXRC Wiring Diagram

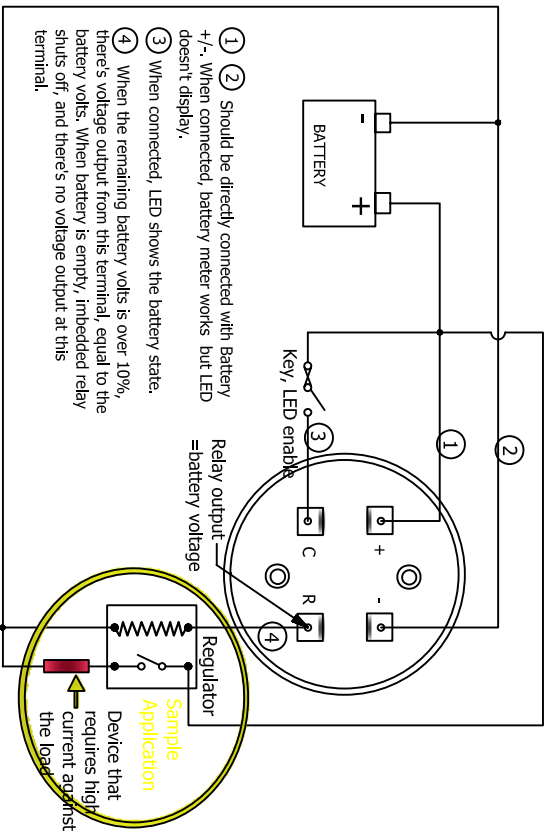

① ② Should be directly connected with Battery +/-, When connected, battery meter works but LED doesn't display.

③ When connected, LED shows the battery state.

④ When the remaining battery volts is over 10%, there's voltage output from this terminal, equal to the battery volts. When battery is empty, imbedded relay shuts off, and there's no voltage output at this terminal.