





ZN & ZNB Series Parts Breakdown

Toll Free: 1-800-579-8088 Web: www.zinko.com

REV 050216 page 2 of 2

CAUTION

1. **DO NOT OVERFILL OIL BEYOND THE OIL FILL LEVEL, AS THE JACK'S OIL AMOUNT LIMITS THE MAXIMUM EXTENSION OF THE RAM.** Too much oil may make the ram fall off, which may result in a serious accident.
2. **SLOWLY TURN RELEASE STEM.** Turning it quickly makes a heavy load fall rapidly, which may result in jack's losing engagement at jacking point, and/or damage to jack leading to a serious accident.
3. If stains on labels make it difficult to make out the instructions on them, or jack appears to be in an abnormal condition, consult your dealer immediately.
4. Ensure no foreign matter such as dirt enters the system while filling oil. **NEVER USE BRAKE OIL OR VEGETABLE OIL, AS SUCH OIL CAUSES JACK TO MALFUNCTION.**

Parts List

MODEL	ZN-2 (2 Ton)	ZN-3 (3 Ton)	ZN-5 (5 Ton)	ZN-8 (8 Ton)	ZN-12 (12 Ton)	ZNB-12 (12 Ton) LOW	ZN-17 (17 Ton)	ZNB-17 (17 Ton) LOW	ZN-22 (22 Ton)	ZNB-22 (22 Ton) LOW	ZN-35 (35 Ton)	ZN-60 (60 Ton)
# Parts Description												
1) Body Assy	N/A											
2) Pump Plunger	ZNO02-2			ZNO08-2			ZNO22-2			ZNO60-2		
3) Pump Backup Ring	ZNO02-3			ZNO08-3						ZNO60-3		
4) Pump Packing	ZNO02-4			ZNO08-4						ZNO60-4		
5) Pump Plunger Pin	ZNO02-5			ZNO08-5			ZNO22-5			ZNO35-5		ZNO60-5
6) Pump Stay Pin	ZNO02-6			ZNO08-6			ZNO22-6			ZNO60-6		
7) Handle Socket Assy	ZNO02-7			ZNO08-7			ZNO22-7			ZNO35-7		ZNO60-7
8) Handle	ZNO02-8		ZNO05-8	ZNO08-8			ZNO22-8			ZNO60-8		
9) Snap Ring/Push Nut	ZNO02-9			ZNO08-9			ZNO22-9			ZNO60-9		
10) Valve Ball	ZNO02-10			ZNO08-10								
11) Valve Spring	N/A			ZNO08-11								
12) Valve Plug	N/A			ZNO08-12								
13) Push Nut	ZNO02-13			N/A								
14) Release Packing	ZNO02-14											
15) Release Assy	ZNO02-15											
16) Ram	ZNO02-16	ZNO3-16	ZNO05-16	ZNO08-16	ZNO12-16	ZNB12-16	ZNO17-16	ZNB17-16	ZNO22-16	ZNB22-16	ZNO35-16	ZNO60-16
17) Ram Packing Seat	ZNO02-17	ZNO3-17	ZNO05-17	ZNO08-17	ZNO12-17a		ZNO17-17	ZNB17-17	ZNO22-17a		ZNO35-17	ZNO60-17
18) Ram Backup Ring	ZNO02-18	ZNO3-18	ZNO05-18	ZNO08-18	ZNO12-18		ZNO17-18		ZNO22-18		ZNO35-18	ZNO60-18
19) Ram Packing	ZNO02-19	ZNO3-19	ZNO05-19	ZNO08-19	ZNO12-19		ZNO17-19		ZNO22-19		ZNO35-19	ZNO60-19
20) Ram Packing Stopper	ZNO02-20	ZNO3-20	ZNO05-20	ZNO08-20	ZNO12-20		ZNO17-20		ZNO22-20		ZNO35-20	ZNO60-20
21) Snap Ring	ZNO02-21	ZNO3-21	ZNO05-21	ZNO08-21	ZNO12-21		ZNO17-21		ZNO22-21		ZNO35-21	ZNO60-21
22) Stuffing Ring	ZNO02-22	ZNO3-22	ZNO05-22	ZNO08-22	ZNO12-22a		ZNO17-22	ZNB17-22	ZNO22-22a		ZNO35-22	ZNO60-22
23) Cylinder Packing	ZNO02-23	ZNO3-23	ZNO05-23	ZNO08-23	ZNO12-23		ZNO17-23		ZNO22-23		ZNO35-23	ZNO60-23
24) Stopper Ring	ZNO02-24	ZNO3-24	ZNO05-24	ZNO08-24	ZNO12-22a		ZNO17-22	ZNB17-22	ZNO22-22a		ZNO35-22	ZNO60-24
25) Adjusting Screw Assy	ZNO02-25	ZNO3-25	ZNO05-25	ZNO08-25	ZNO12-25	ZNB12-25	ZNO17-25	ZNB17-25	N/A	ZNB22-25	N/A	
26) Supporting Plate	N/A											
27) Snap Ring	N/A											
28) Oil Plug	ZNO02-28											
29) Horizontal Pin	N/A						ZNO17-29		ZNO22-29		ZNO35-29	ZNO60-29
30) Vertical Pin	N/A						ZNO17-30		ZNO22-30	ZNB22-30	ZNO35-30	ZNO60-30
31) Ram Spring	N/A						ZNO17-31					
32) Ram Spring Stopper	N/A						ZNO17-32					
33) Ram Assy	ZNO02-33	ZNO3-33	ZNO05-33	ZNO08-33	ZNO12-33	ZNB12-33	ZNO17-33	ZNB17-33	ZNO22-33	ZNB22-33	ZNO35-33	ZNO60-33
34) Pin, Handle Socket	ZNO02-34			N/A						ZNO60-34		
35) Safety Valve Ball	N/A									ZNO60-35		
36) Safety Valve Ball Seat	N/A									ZNO60-36		
37) Safety Valve Spring	N/A									ZNO60-37		
38) Adj. Screw Safety Valve	N/A									ZNO60-38		
39) Safety Valve Plug	N/A									ZNO60-39		
40) Ring	N/A			ZNO12-40			N/A		ZNO22-40		N/A	