



Part #	Description
9130075-01	Base
9130075-02	Adjustment Screw
9130075-03	Plug
9130075-04	Bearing

Part #	Description
913075-05	Handle
913075-06	Grease Hole
913075-07	Saddle
913075-08	Roll Pin