



No.	Description	ZHP-18	ZHP-28
1	Pump Housing	923-018-01	
2	Oil Filter	923-018-02	
3	*O-Ring	RP	
4	Screw	923-018-04	
5	Reservoir	923-018-05	923-028-05
6	Tail Base	923-018-06	
7	*O-Ring	RP	
8	Nipple	923-018-08	
9	Check Ball	923-018-09	
10	Set Screw	923-018-10	
11	*O-Ring	RP	
12	Release Valve	923-018-12	
13	Check Ball	923-018-13	
14	Check Ball	923-018-14	
15	Spring	923-018-15	
16	Washer	923-018-16	
17	Valve Cover Screw	923-018-17	
18	Check Ball	923-018-18	
19	Spring End Cap	923-018-19	
20	Spring	923-018-20	

No.	Description	ZHP-18	ZHP-28
21	*O-Ring	RP	
22	Overload Cover Screw	923-018-22	
23	Cap	923-018-23	
24	*O-Ring	RP	
25	*Back-Up ring	RP	
26	Piston	923-018-26	
27	Yoke	923-018-27	
28	Piston Pin	923-018-28	
29	Yoke Pin	923-018-29	
30	Retaining Ring	923-018-30	
31	Handle	923-018-31	923-028-31
32	Handle Grip	923-018-32	
33	Screw	923-018-33	
34	Nut	923-018-34	
35	*O-Ring	RP	
36	Air Release Screw	923-018-36	
37	Hose	92104-02	
38	Coupler 1/4" L type -H	9210104L-H	
39	Plastic cap for coupler	included in #38	
RP	Repair kits (All * above)	9219401-RP	

* 37, 38, 39 are optional parts.