


## **Repair Parts Sheet**

## 925014 Hand Pumps

L2298

Rev. A 8/12

Date codes beginning with "A"

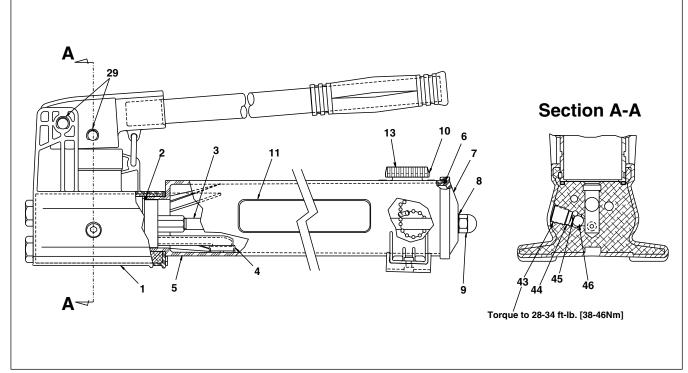

## Figure 1. Section A-A

ТЕМ	PART NUMBER	QUANTITY	DESCRIPTION
	Order Complete Pump	1	Pump Base
	★B1270503	1	O-Ring
	DA7957149	1	Tie Rod
	★DA3729900SR	1	Filter Assembly
	Contact NORCO	1	Reservoir Assembly
	★B1291503	1	O-Ring
	CN823020	1	End Cap
	★CU293167	1	Gasket
	CL341055	1	Acorn Nut
0	CN766950SR	1	Vent Cap Assembly
1	U972100026-15		Norco Decal
3	★CN780026	1	Vent Cap Decal
9	DA1177349	2	Retaining Ring
3	CN815006	1	Pipe Plug
4	★DA3702020	1	Spring Cap
5	★DA1176210	1	Conical Spring
6	★B1009016	2	Ball

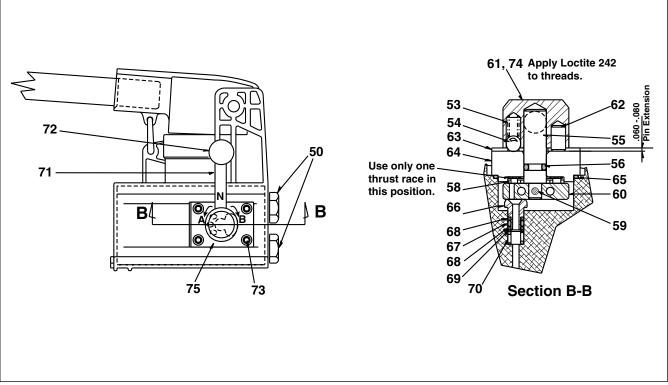


Figure 2. Section B-B

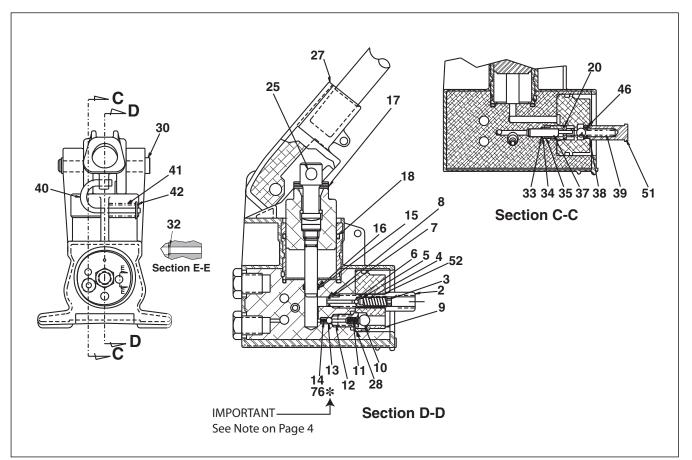


Figure 3. Sections B-B, C-C and D-D

ТЕМ	PART NUMBER	QUANTITY	DESCRIPTION
	★DA7557190	1	Valve Body
<u> </u>	A8116048	1	Hollow Lock Screw
	A8126110	1	Compression Spring
	A8038570	1	Ball Cap
	★B1003016		Ball
		1	
	★B1009564	1	Teflon Back-Up Washer
	★B1009903	1	O-Ring
	DC595071	1	Valve Disc
)	★B1011016	1	Ball
	★DA4527110	1	Spring
2	DA7556290	1	Valve Seat
}	★B1005016	1	Ball
1	★DC1124210	1	Conical Spring
5	★B1013903	1	O-Ring
6	★B10113564	1	Back-Up Washer
7	DC538900SR	1	Plunger Assembly
3	★DC1170041	1	Seal
)	★B1007503	1	O-Ring
5	DC106061	1	Beam Pin
7	CL918900SR	1	Beam and Handle Assembly
	★B1239503	1	O-Ring
)	CR214061SR	1	Beam Pin Assembly
	★B1008903	1	O-Ring
	★B1010903	1	O-Ring
	★B1010566	1	Teflon Washer
;	DC596290	1	Insert Seat
,	DA10249051	1	Piston
	★DA10259167	1	Copper Gasket
	DA10157110	1	Spring
)	CM927061	1	Locking Pin
, 	Y267110	1	Spring
2	CM928044	1	Push On Ring
)	R515245-2	2	Plug
) 	DA10246020	1	Spring Cap
2	DA10248020	<u> </u>	Gasket
<u>-</u> }	★A8161110	<u> </u>	Compression Spring
	★8161110 ★B1007016	<u> </u>	Ball
;	DC703104	<u> </u>	Shaft
) }	★B1005503	1	O-Ring
3	C940155	1	Bearing
) )	B1040057	1	Spring Pin
9 0	DC1363900SR	1	Plug and Disc Ass'y
-	2010000000		(incl. items 55, 56, 58, 59, 65)
1	DA7297815	1	Hub
2	B1126057	1	Roll Pin
3	DA7298101	1	Detent
4	DA7299098	1	Cover
,	★B1233503	1	O-Ring
;	DA11071041SR	3	Shear Seal Poppet Ass'y.
			(incl. items 65, 67, 68, 69, 70)

<b>REPAIR PARTS LIST - CONTINUED (Refer to Figures 2 and 3)</b>						
ITEM	PART NUMBER	QUANTITY	DESCRIPTION			
67	★B1002503	3	O-Ring			
68	★DA7285566	6	Back-Up Washer			
69	★DA7287108	3	Washer			
70	★DA7286110	3	Compression Spring			
71	DA9345070	1	Handle			
72	DA6951147	1	Knob			
73	B25090288	4	Screw			
74	BF2504027B	2	Set Screw			
75	★DC1353026	1	Decal			
76	★DD1161013	1	Spring Guide			

\* Note - Figure 3: Pump must function properly when used in cold ambient temperatures. Install spring guide (item 76), new conical spring (item 14), new ball (item 13), and new valve seat (item 12) to ensure reliable pump operation during cold conditions.

Spring guide (item 76) should be installed even on older pumps that were originally not manufactured with this part.

## **REPAIR SERVICE**

If your Norco product requires service or repair, contact the Norco Customer Service Department for the location of the nearest Norco Authorized Service Center.

Norco Industries, Inc. 365 West Victoria St. Compton, CA 90220 (310) 639-4000 • Fax: (310) 639-7411 www.norcoindustries.com It will be necessary to provide the Norco Authorized Service Center with a copy of the bill of sale if requesting warranty repair. If the authorized service center determines your product is eligible for warranty repair, the repair will be made at no charge and returned freight prepaid. The cost of non-warrantable service, repair, and return freight is the customer's responsibility.