



## REPAIR PARTS

No.	Description	Part No.	No.	Description	Part No.
1	Main Body	100-102	8.	Clamp	100-109
2.	Cap Screw	100-103	9.	Push Bar	100-110
3.	Thrust Washer	100-104	10.	Push Bar Nut	100-111
4.	Clamp Bolt	100-105	11.	Push Bar Bolt	100-112
5.	Clamp Nut	100-106	12.	Thrust Bar	100-113
6.	Spacer	100-107	13.	Retaining Ring	100-114
7.	Bolt 1/4" x 1 1/2"	100-108			

**Order parts from your distributor or jobber.**

When ordering parts always give the following information: Part number, description and serial number of your machine.

