



MODEL BS-07

REPAIR PARTS

No.	Description	Part No.	No.	Description	Part No.
1.	Airtank	N/A	8.	Handle & Nut Only	01.230
2.	Safety Release Valve	05.102	9.	6" Pipe Nipple	02.104
3.	3/4" - 1/4" Bushing	01.107	10.	Pressure Gauge	01.106
4.	Ball Valve	04.103	11.	Rubber Feet	12607
5.	Flared Barrel	6813			
6.	Lock Nut	03.107			
7.	Discharge Valve (Includes Handle)	03.102			

Order parts from your distributor or jobber.
 When ordering parts always give the following information: Part number, description and serial number of your machine.

Reminder: Always exercise caution when using compressed air.

PCL Connector is NOT INCLUDED must be purchased separately.